


PFA Software Installation and Licensing Process:

1. Install PFA software


PFA software is included as a plug-in with PFV 32 bit software, version 3.3.5 or later.
PFA software is available with PFV 64 bit software, version 3.3.9.1 or later.

At the end of the PFV installation process the screen below is displayed.

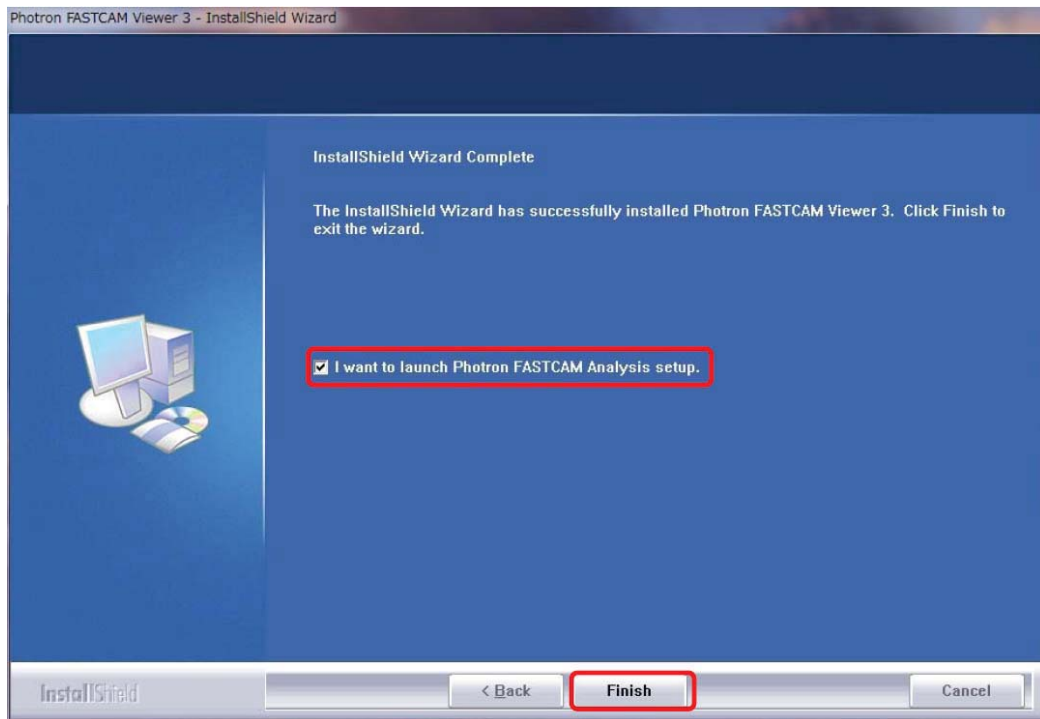


Check the box (I want to launch Photron FASTCAM Analysis setup) and then click (Finish).

When the installation is complete the screen below will appear. Click (Finish).

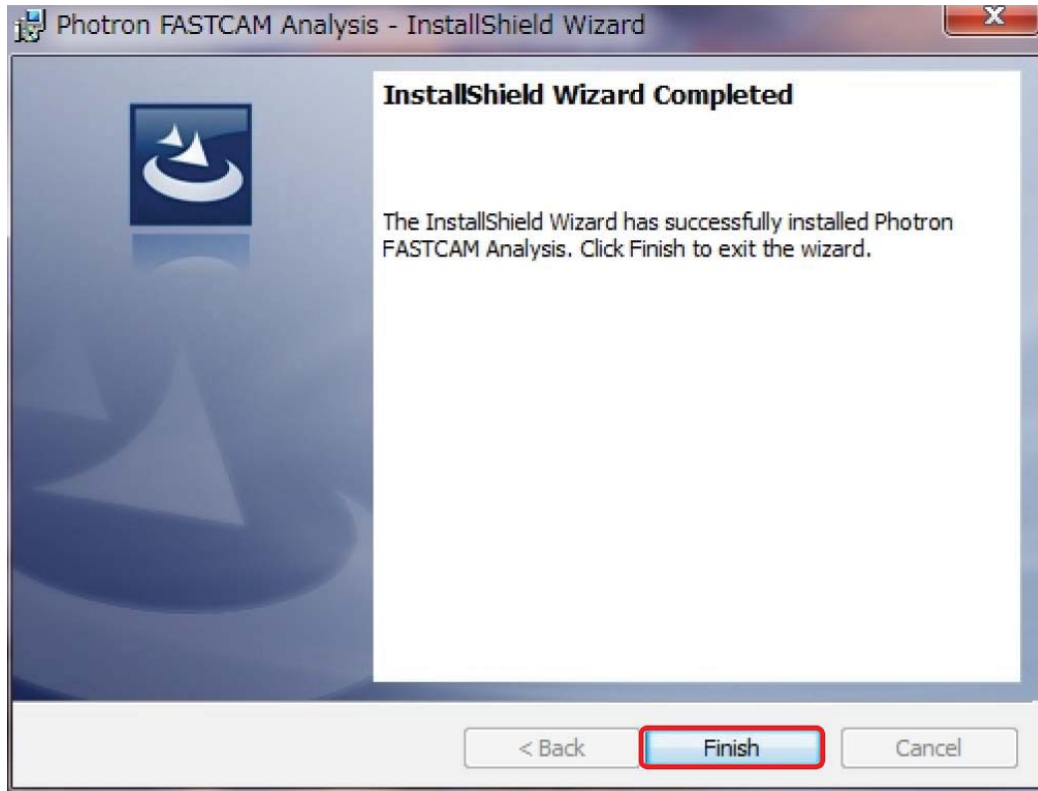

2. Launching PFA software

When PFV software is running and an image sequence is displayed, either from a connected camera or from a saved file opened using the CIH data, PFA can be launched by clicking the (Analysis) button.

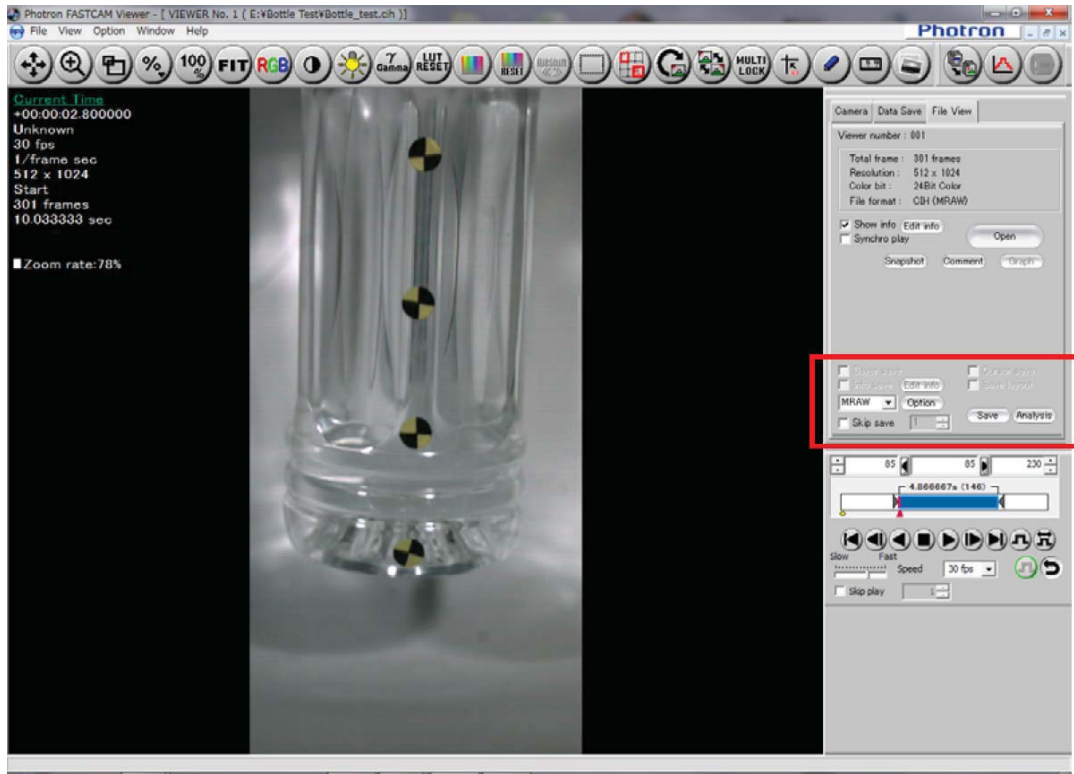

PFA software provides a 90 day free trial license.


3. Installing a PFA permanent license

When a PFA software license is purchased, a 19 digit 'Product Key' is issued by Photron.


Note: PFA software is licensed for use on a single PC and cannot be transferred from one PC to another. Please make sure that the PFA license is installed on the PC where you wish to use the software.

Online Activation:

In PFA software click on the (Configuration) tab:

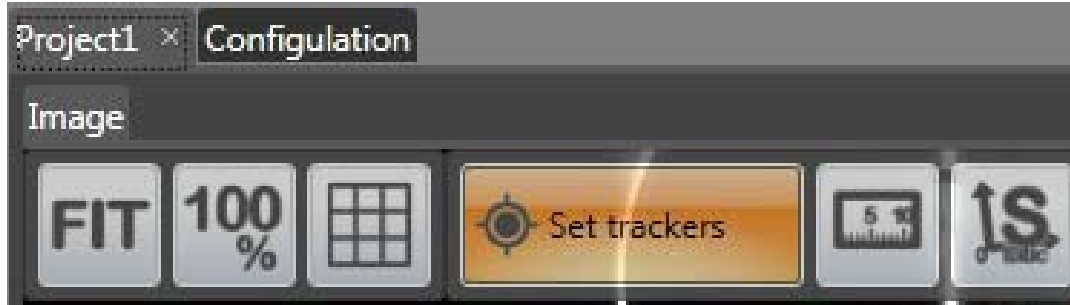

Enter your 19 digit Product Key In the box provided then click on the activate button.

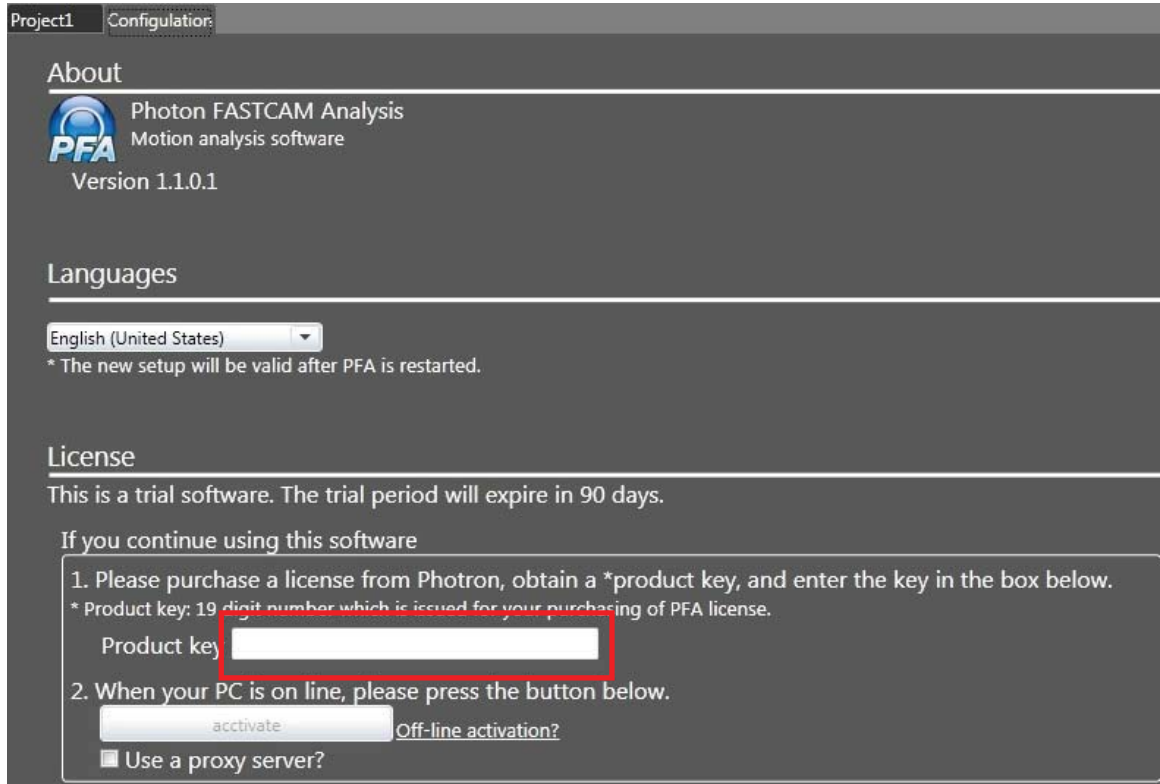

Your PFA software is now activated.

Offline Activation:

Enter your 19 digit Product Key In the box provided then click on the Generate Status Information button.

The screenshot shows the 'Configuration' window of Photon FASTCAM Analysis software. The window has tabs for 'Project1' and 'Configuration'. The 'About' section displays the PFA logo, 'Photon FASTCAM Analysis Motion analysis software', and 'Version 1.1.0.1'. The 'Languages' section has a dropdown menu set to 'English (United States)' with a note: '* The new setup will be valid after PFA is restarted.' The 'License' section states: 'This is a trial software. The trial period will expire in 90 days.' Below this, it says 'If you continue using this software' and lists three steps: 1. Purchase a license and enter the product key (1923568759874378438, highlighted in a red box). 2. Generate a status information file (zip) and send it to PFA_licensing@photron.co.jp. 3. Update the license file (v2c) from Photron. There are buttons for 'Generate Status Information', 'On-line activation?', and 'Update License'.

The computer will generate a Status Information File (c2v) which will be saved to the location specified.

Send the **c2v file** together with the following information:

19-digit Product Key

Your name

The name of your organization

The e-mail address to which license information should be sent


To: PFA_Licensing@photron.co.jp

PFA software can be used under the temporary license for up to 90 days.

When an Update License File (v2c) is received from Photron it should be saved to a known location on the computer.

Open PFV software as described above.

Click on the PFA Configuration tab, then click on Update License

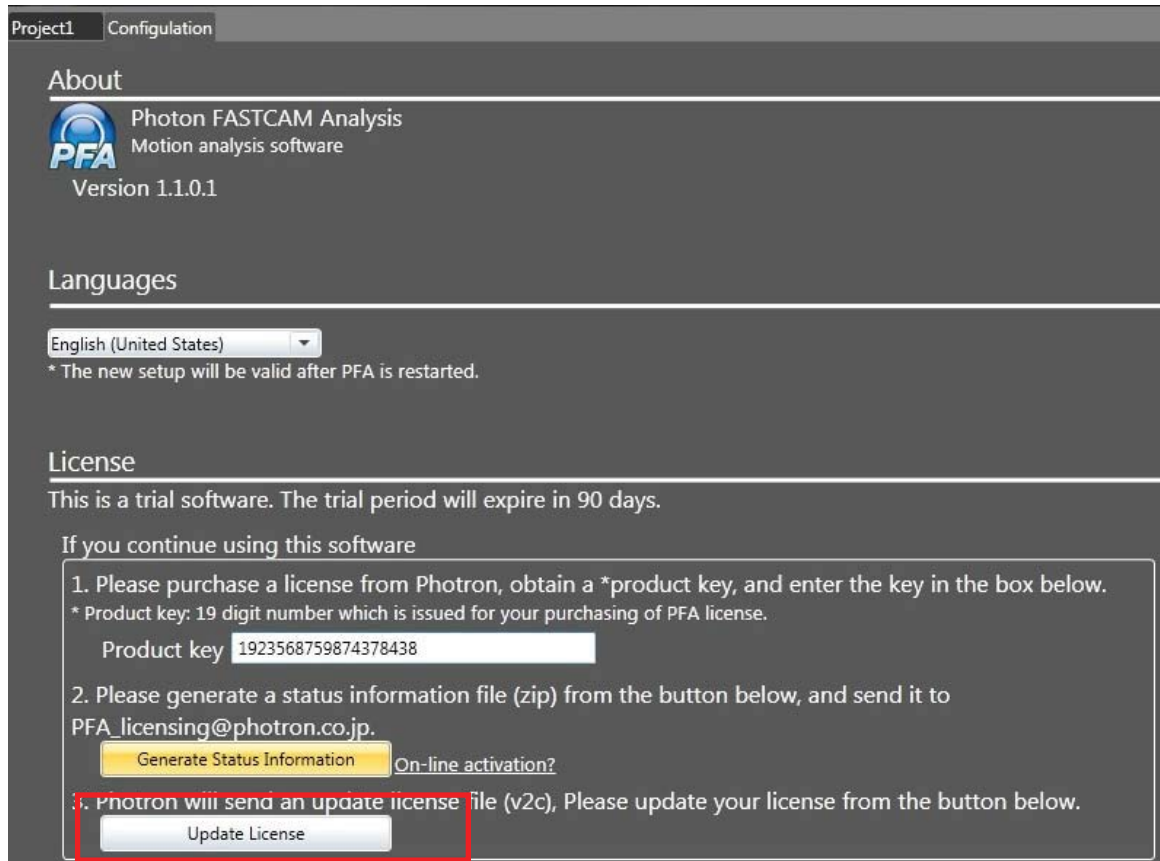

Locate the Update License File (v2c) on the computer and click OK.

PFA software is now licensed for use on this computer.

For full installation, licensing and operation instructions please see the Photron FASTCAM Analysis Installation Manual.